




COOKTOP PARTS

For Models: RF214LXTQ1, RF214LXTB1, RF214LXTS1
(Designer White) (Black) (Stainless)

30" ELECTRIC FREESTANDING
STANDARD CLEAN RANGE

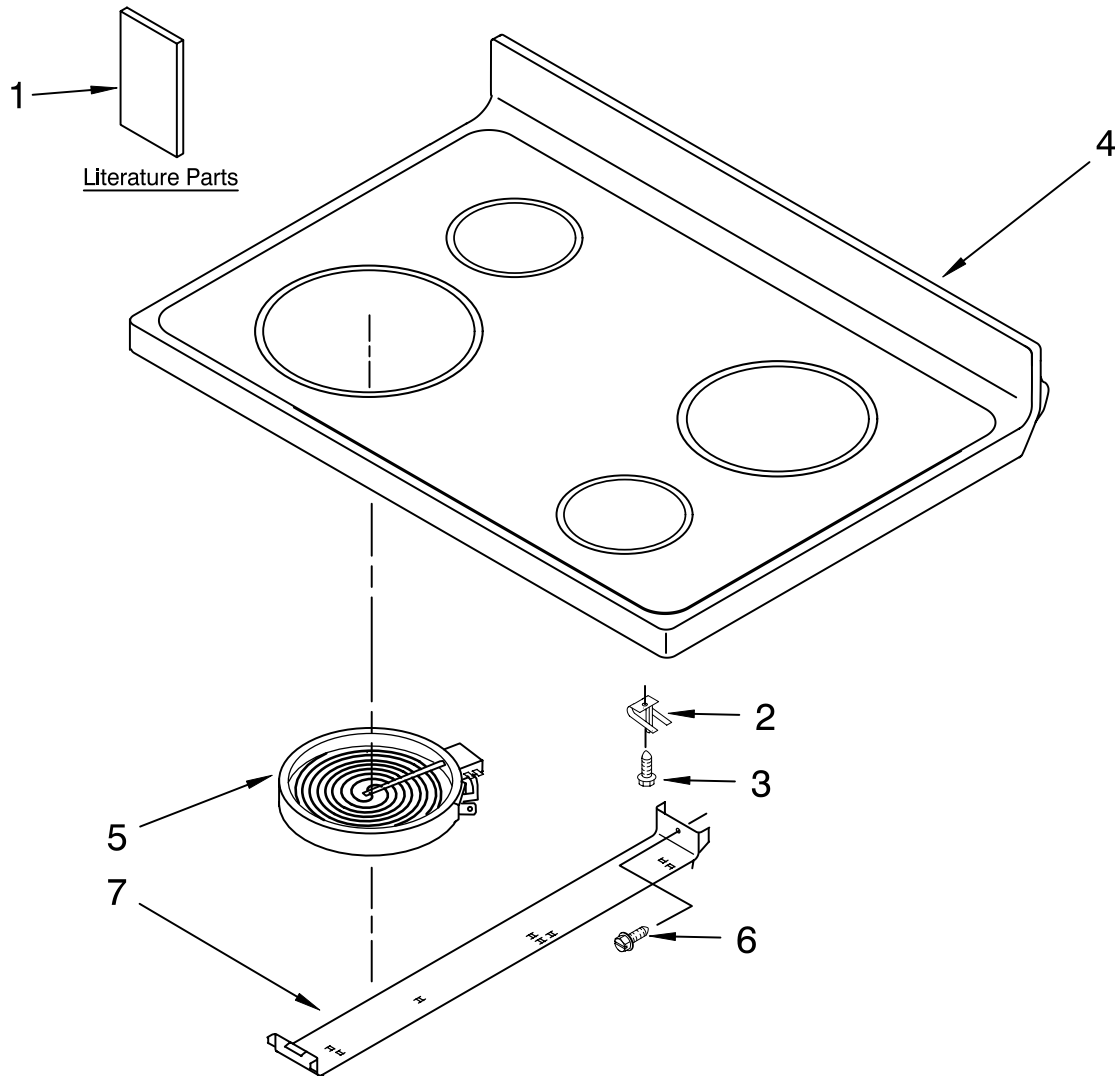

Illus. No.	Part No.	DESCRIPTION
1	W10141166	Literature Instructions Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	W10162204	Owners Manual
	W10133888	Tech Sheet
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	W10035930	Spring, Locator
3	3196170	Screw
4	W10134932	White/White
	W10141973	Black

Illus. No.	Part No.	DESCRIPTION
5	8523695	Element, Surface
	8523697	2000 W - LF
	8523697	1500 W - LR
	8523695	2000 W - RR
	8523697	1500 W - RF
6	3196169	Screw
7	3196454	Bracket, Element

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF214LXTQ1, RF214LXTB1, RF214LXTS1
(Designer White) (Black) (Stainless)

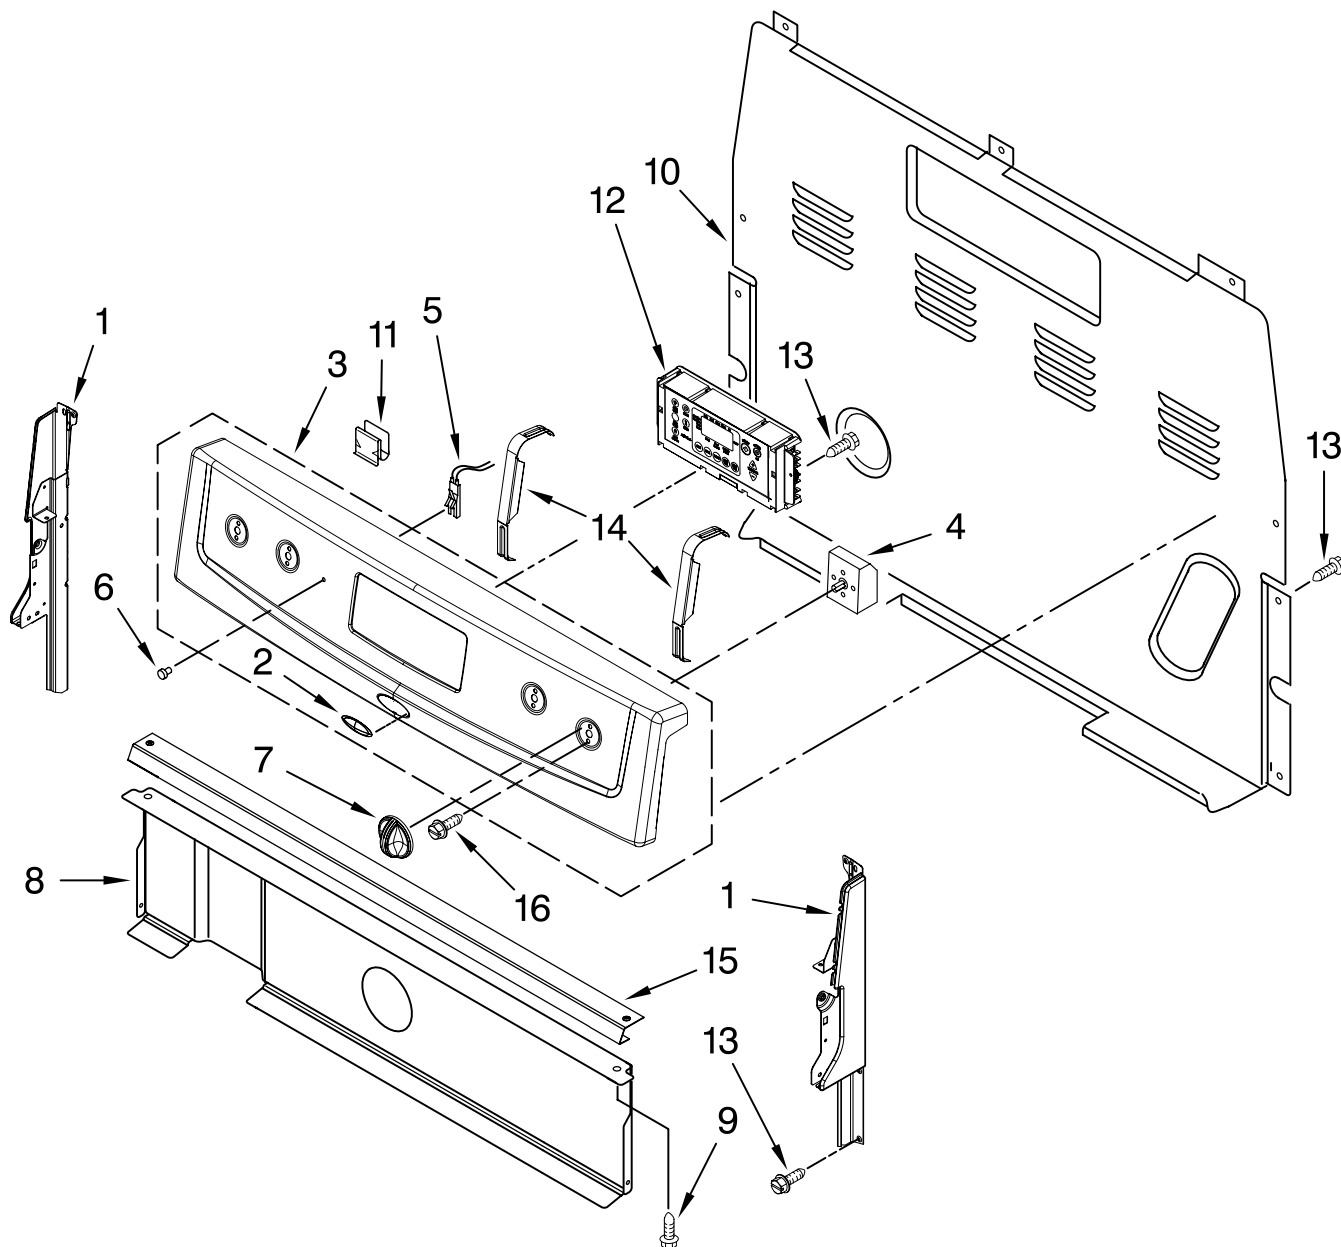

Illus. No.	Part No.	DESCRIPTION
1	W10009040	Endcap White LH
	W10009050	White RH
	W10009080	Black LH
	W10009090	Black RH
2	9757609	Nameplate
3		Panel, Backguard
	9762018	White
	W10120937	Black
	W10127721	Stainless

Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	3148953	Left Front
	3148952	Left Rear
	3148953	Right Rear
	3148952	Right Front
5		Light, Indicator
	8523265	Surface Unit (2)
6	3196068	Lens, Light (3)
7		Knob, Infinite (4)
	9761962	White
	9761964	Black


Illus. No.	Part No.	DESCRIPTION
8	W10134247	Shield, Heat
9	3196166	Screw
10	8272473	Cover, Upper
11	8273564	Clip
12		Control, Range
	W10108280	White
	W10108290	Black
13	3196178	Screw
14	9762078	Brkt-Mntg, EOC
15	9762095	Brkt-Mntg, Console
16	3400882	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF214LXTQ1, RF214LXTB1, RF214LXTS1

(Designer White) (Black) (Stainless)

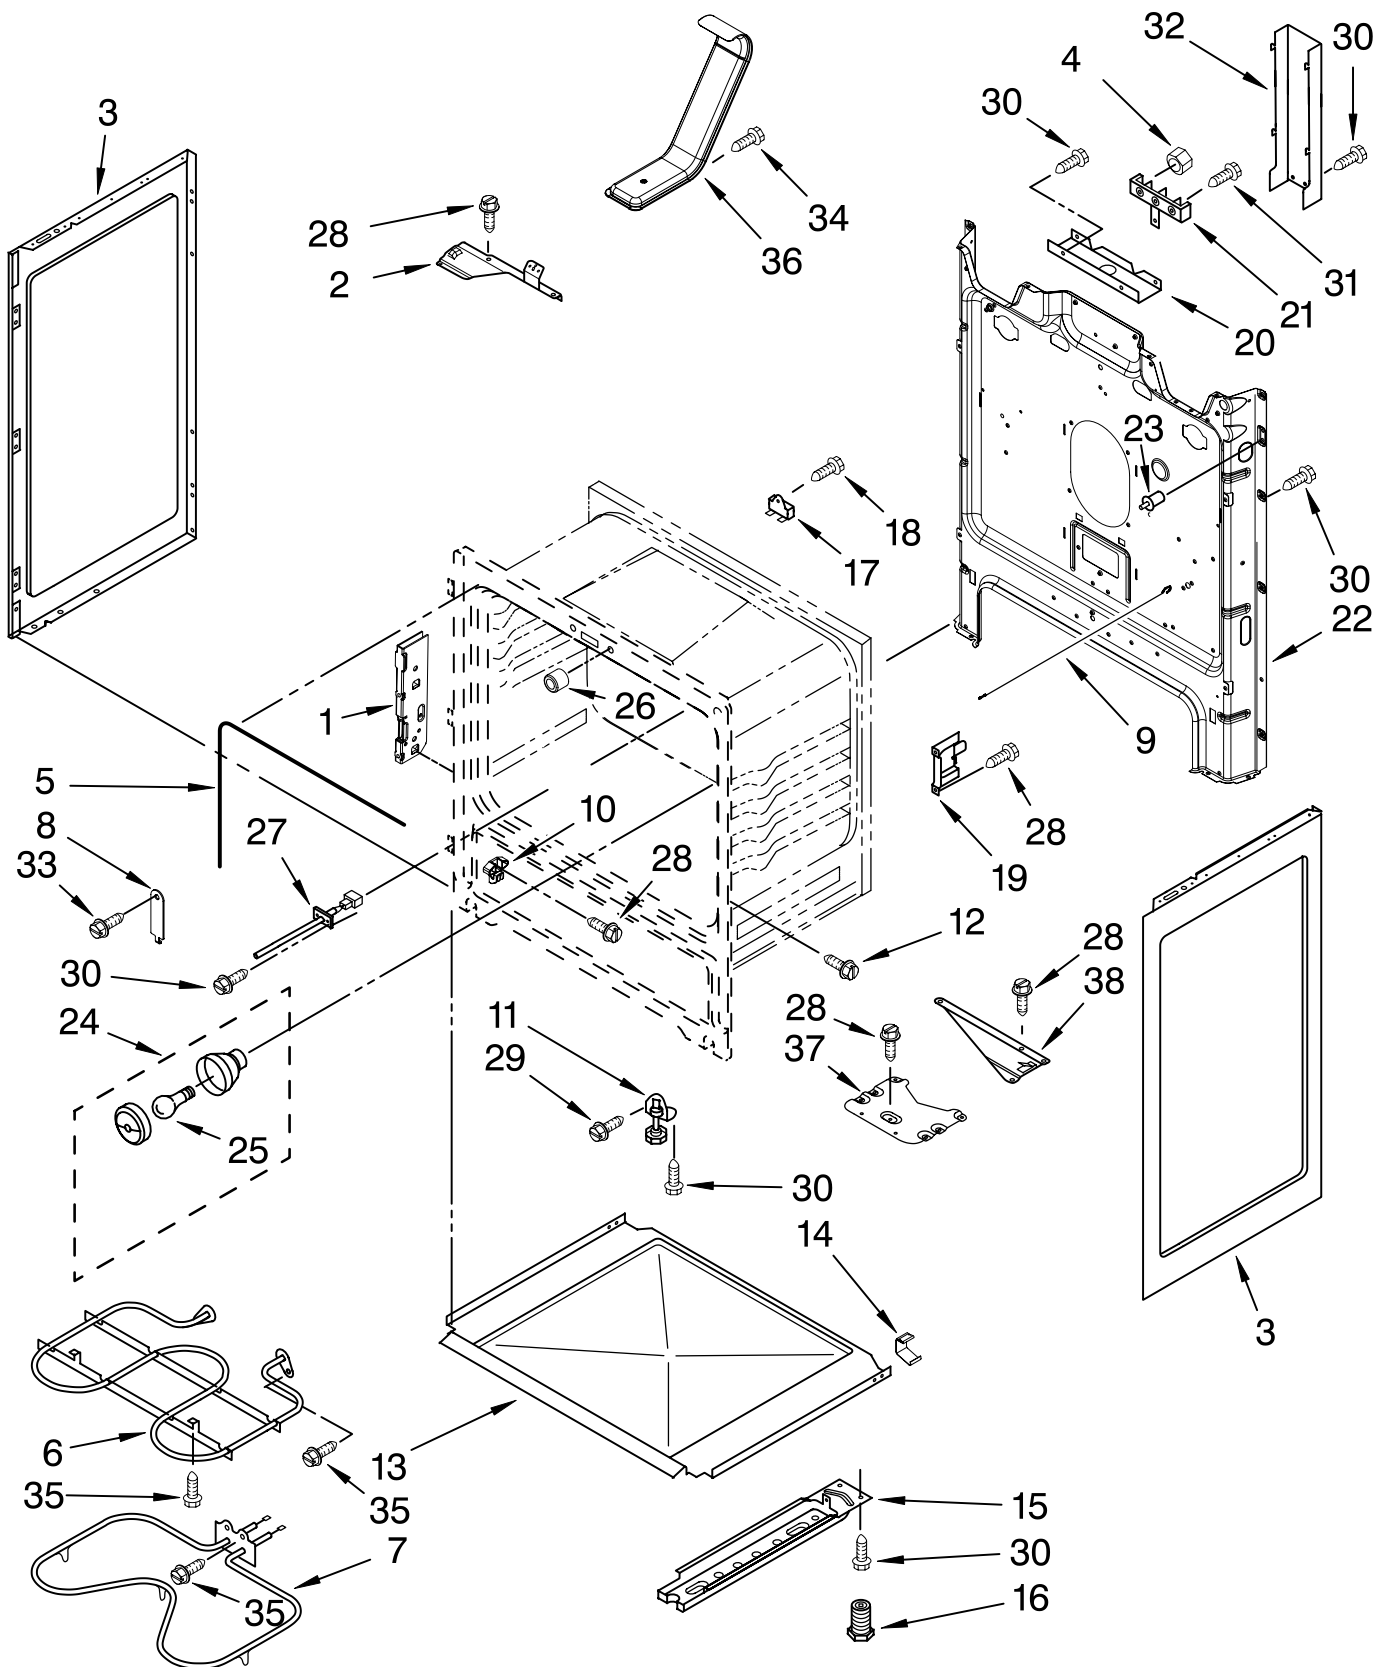

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF214LXTQ1, RF214LXTB1, RF214LXTS1
(Designer White) (Black) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9760407	Brkt – Mounting
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White-Textured
	8053832	Black
4	112432	Nut
5	W10129032	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	9761517	Clip,Door Mntg(2)
9	9757239	Rod – Dr Switch
10	W10114344	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12	W10067840	Screw
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	W10058460	Foot, Rear (2)
17	3196548	Thermal, Fuse
18	3196172	Screw
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	9758701	Spacer – Door
27	8273902	Sensor, Oven
28	3196169	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
32	9758283	Cover, Box
33	W10031780	Screw
34	3196566	Screw
35	3196174	Screw
36	9761299	Flue
37	3195736	Support, Front (2)
38	3195987	Support, Corner RR


INSULATION

8273263 Insulation, Wrap
8272611 Insulation, Back
8272613 Insulation, Vent

DRAWER & BROILER PARTS

For Models: RF214LXTQ1, RF214LXTB1, RF214LXTS1

(Designer White) (Black) (Stainless)

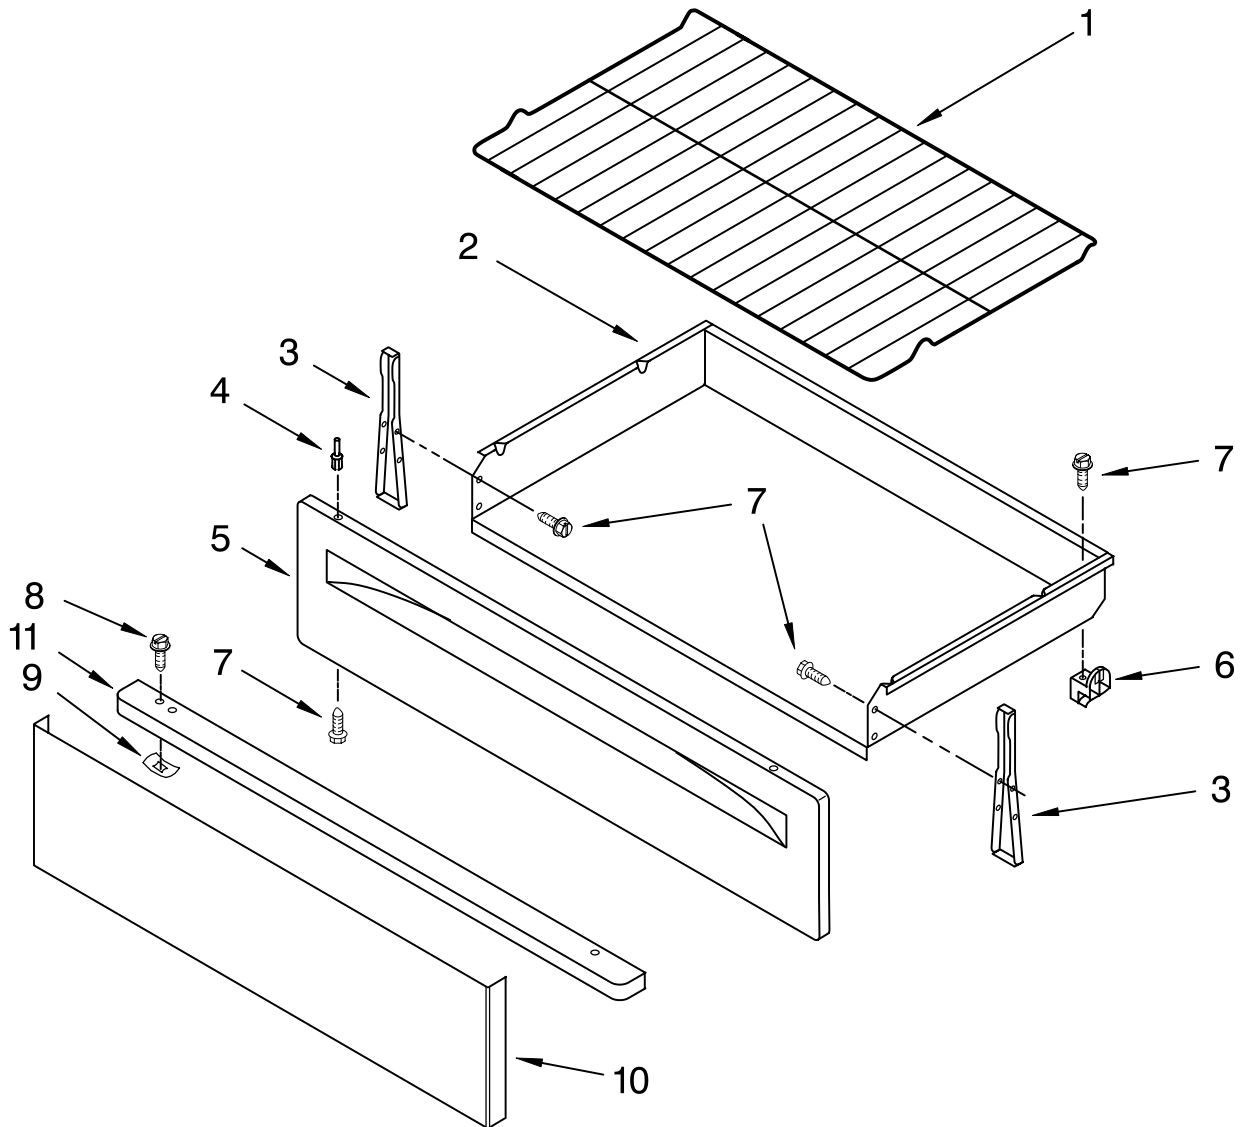


Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761031	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196814	White
	3196813	Black
5		Panel, Drawer Frnt
	8053339	White
	8053341	Black
6	8053334	Glide, Drawer (2)
7	3196168	Screw
8	W10031790	Screw(Stls.Model)
9	9781235	Clip(Stls. Model)
10	W10133363	Panel(Stls.Model)
11	9757219	Handle(Stls.Model)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF214LXTQ1, RF214LXTB1, RF214LXTS1
(Designer White) (Black) (Stainless)

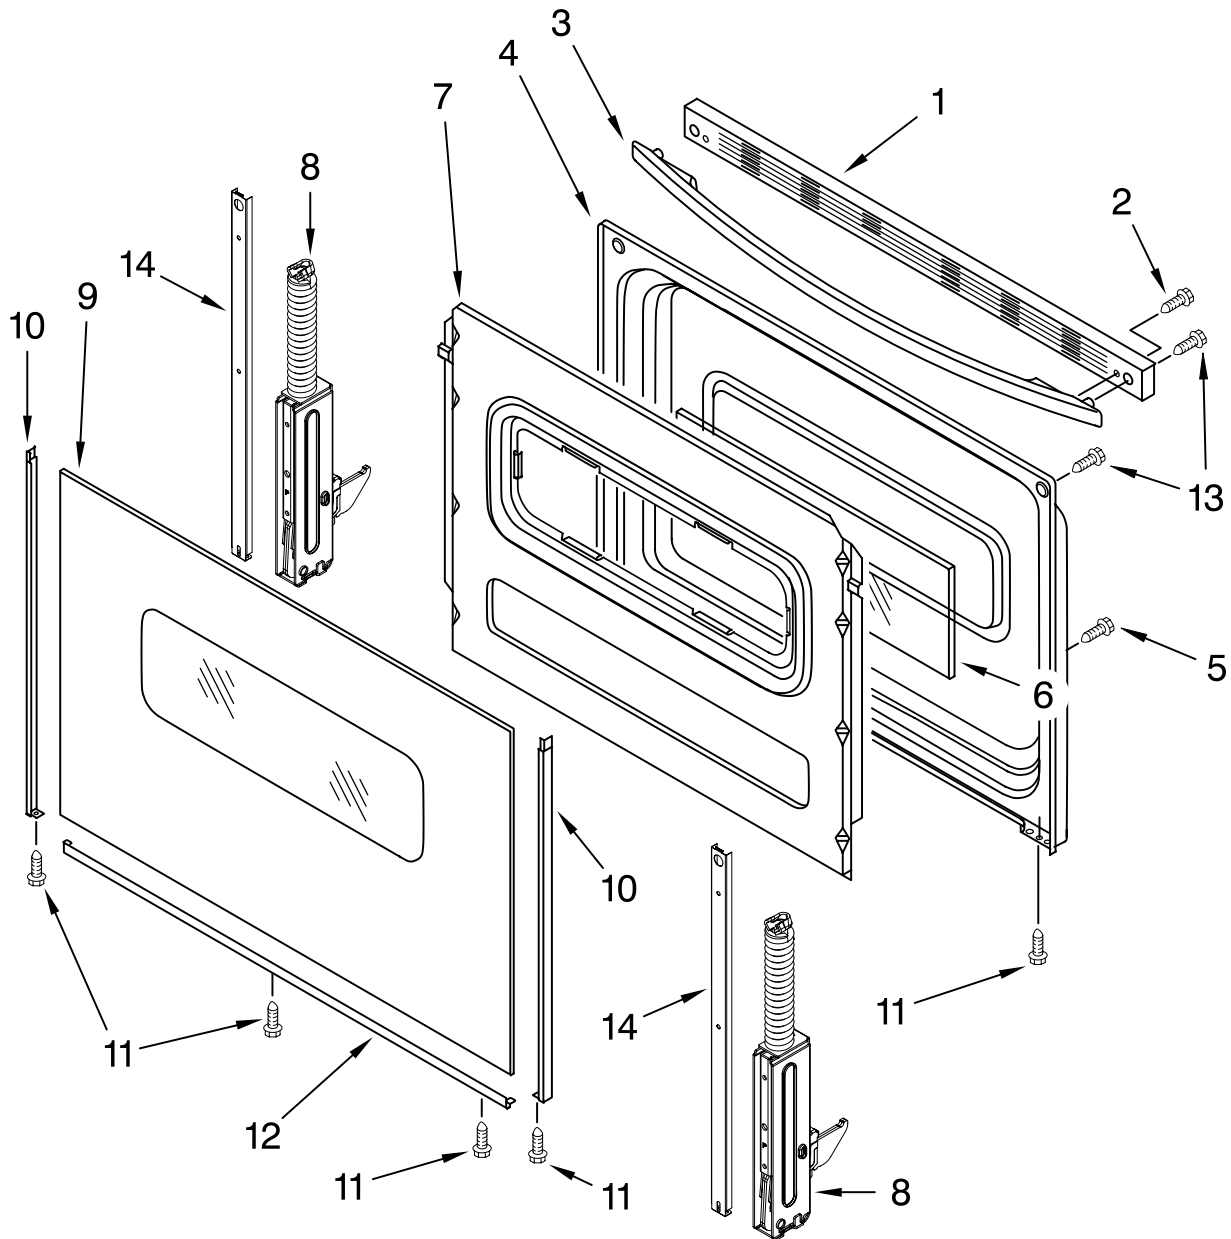

Illus. No.	Part No.	DESCRIPTION
1	9761975	Trim, Top
	9762391	White
	9762394	Black
	9762394	Stainless Model
2	3196164	Screw
3		Handle, Door
	9761982	White
	9761983	Black
4	9761344	Liner, Door
5	W10031790	Screw

Illus. No.	Part No.	DESCRIPTION
6	9758162	Window, Inner
7	9761501	Retainer, Insul.
8		Hinge, Door (2)
	9761494	White,Black
	9761493	Stainless Model
9		Glass, Outer
	W10075980	White
	W10075990	Black
	W10154806	Stainless

Illus. No.	Part No.	DESCRIPTION
10		Trim, Side
	8523172	White Left Hand
	8523166	White Right Hand
	8523171	Black LH
	8523165	Black RH
11	3196160	Screw
12		Trim, Lower
	8523175	White
	8523177	Black
	8523180	Stainless Model
13	W10031780	Screw
14	W10113759	Strap, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: RF214LXTQ1, RF214LXTB1, RF214LXTS1
(Designer White) (Black) (Stainless)

Illus. No.	Part No.	DESCRIPTION
<u>SPLICING WIRES--25FT. LENGTH</u>		
	242828	Wire, Black 12 Ga. 150° c
	242821	Wire, Blue 14 Ga. 150° c
	242822	Wire, Brown 14 Ga. 150° c
	242830	Wire, Brown 14 Ga. 200° c
	242823	Wire, Green 14 Ga. 150° c
	242824	Wire, Orange 14 Ga. 150° c
	242825	Wire, Red 14 Ga. 150° c
	242831	Wire, Red 14 Ga. 200° c
	242827	Wire, Yellow 14 Ga. 150° c
<u>REFINISHING MATERIAL</u>		
	799832	Kit, Porcelain Repair (White)
	242756	Touch-Up Self-Clean(1/2 Pt)
	261582	Grease

Illus. No.	Part No.	DESCRIPTION
<u>INSULATION</u>		
	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
	72017	White
	72107	Almond
	511873	White Porcelain (2 Oz.)
<u>PAINT, PRESSURIZED SPRAY (12 oz.)</u>		
	350930	White
	350956	Almond
	285006	Superior Black
	206922	Primer (White)
<u>PAINT, BULK (1 qt.)</u>		
	799344	White (Uncut)
	978883	Almond (Uncut)

Illus. No.	Part No.	DESCRIPTION
<u>ACCESSORY PARTS</u>		
	241430	Foil, Aluminum Oven (18" x 25')
	3191048	Cleaner, Glass
	4396923	Pan, Broiler
<u>ANTI-TIP KIT</u>		
	W10017440	Anti-Tip Kit
<u>WIRING HARNESS PARTS</u>		
	W10111769	Harness, Wire (Cooktop Left)
	W10111770	Harness, Wire (Cooktop Right)
	W10083650	Harness, Wire (Sensor/Dr Switch)
	8523279	Wire, Ground
	3196154	Screw
	W10111776	Harness, Wire (Main)
	313660	Clip, Wire Ground
	3196173	Screw
	3196174	Screw (Grnd Wire / Back)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST